


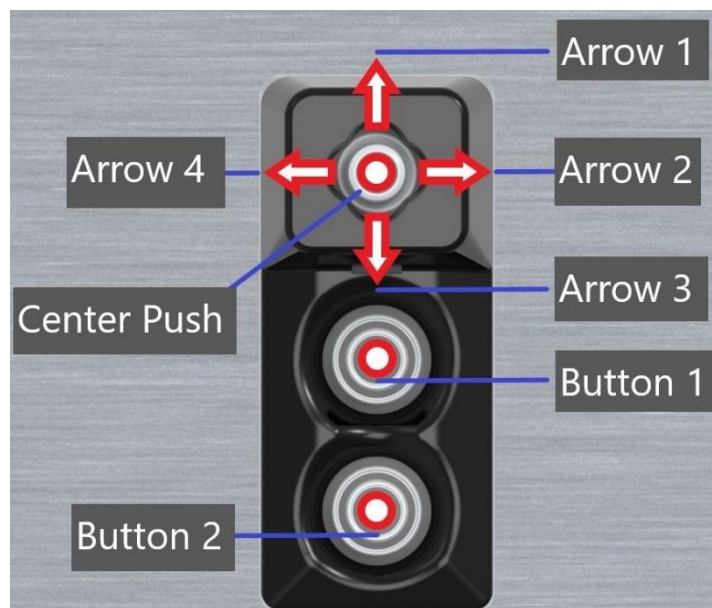

Default profile for Locus Map Pro:

	Short Press	Long Press
Arrow 1	Map pan up	Map pan up – fast scrolling
Arrow 2	Map pan right	Map pan right – fast scrolling
Arrow 3	Map pan down	Map pan down – fast scrolling
Arrow 4	Map pan left	Map pan left – fast scrolling
Center Push	Enter / confirm highlight	Map rotation on/off
Button 1	Zoom in	Map centering on/off
Button 2	Zoom out	Escape

To enable map rotation control, press and hold the icon highlighted on the picture. A sub-menu will pop-up to select the default action for that command. Select „Rotate map“.

